



Australian Government

TLIC2074 Couple and uncouple track maintenance vehicles

Release: 1

TLIC2074 Couple and uncouple track maintenance vehicles

Modification History

Release 1. This is the first release of this unit of competency in the TLI Transport and Logistics Training Package.

Application

This unit involves the skills and knowledge required to safely couple/uncouple track vehicles in accordance with safeworking and organisational, policies and procedures.

It includes preparing to couple track maintenance vehicles, coupling track maintenance vehicles, and uncoupling and securing track maintenance vehicles.

This unit is intended for all types of track maintenance vehicles required to be coupled and uncoupled as part of operational requirements. Track maintenance vehicles may include:

- overhead wiring maintenance vehicle
- road/rail vehicles
- shunting tractors
- track inspection vehicles
- track machines
- wagon.

No licensing, legislative or certification requirements apply to this unit at the time of publication.

Pre-requisite Unit

Not applicable.

Competency Field

C – Vehicle Operation

Unit Sector

Not applicable.

Elements and Performance Criteria

ELEMENTS

PERFORMANCE CRITERIA

Elements describe the essential outcomes.

Performance criteria describe the performance needed to demonstrate achievement of the element.

1 Prepare to couple track maintenance vehicles

- 1.1 Coupling instructions are interpreted and confirmed as meeting minimum operating standards
- 1.2 Location of vehicles and required movements are identified
- 1.3 Hazards are identified, risks are assessed and control measures are implemented
- 1.4 Communication methods to be used are agreed and confirmed
- 1.5 Vehicle/s to be coupled are secured in accordance with organisational procedures

2 Couple track maintenance vehicles

- 2.1 Setting of route and having correct authority in place is ensured prior to movement of track vehicles
- 2.2 Warning is given before vehicle is moved
- 2.3 Vehicle is moved in a controlled manner to enable safe coupling and prevent damage
- 2.4 Coupling mechanisms are checked to ensure they are correctly engaged
- 2.5 Connecting brake hoses and/or electrical couplings are connected as required, in accordance with organisational procedures and/or manufacturer specifications
- 2.6 Securing devices are released/removed in accordance with organisational procedures

3 Uncouple and secure track maintenance vehicles

- 3.1 Hazards are identified, risks are assessed and control measures are implemented
- 3.2 Vehicles are positioned to meet uncoupling requirements in accordance with organisational procedures
- 3.3 Securing devices are applied/attached in accordance with organisational procedures
- 3.4 Brake hoses and/or electrical couplings are disconnected in accordance with organisational procedures and/or manufacturer specifications
- 3.5 Coupling devices are correctly disengaged

3.6 Warning is given before vehicle is moved

3.7 Vehicles are separated in a controlled manner to enable safe uncoupling and prevent damage

Foundation Skills

Foundation skills essential to performance are explicit in the performance criteria of this unit of competency.

Range of Conditions

Range is restricted to essential operating conditions and any other variables essential to the work environment.

Non-essential conditions can be found in the Companion Volume Implementation Guide.

Unit Mapping Information

This unit replaces and is equivalent to TLIC2074A Couple and uncouple track maintenance vehicles.

Links

Companion Volume implementation guides are found in VETNet -

<https://vetnet.gov.au/Pages/TrainingDocs.aspx?q=df441c6e-213d-43e3-874c-0b3f7036d851>