



Australian Government

AURVTT003 Remove and replace automotive and marine interior trim components

Release: 1

AURVTT003 Remove and replace automotive and marine interior trim components

Modification History

Release	Comment
Release 1	New unit of competency.

Application

This unit describes the performance outcomes required to safely remove and replace interior trim in an automotive or marine application. It involves preparing for the task, selecting and using tools and equipment, removing and replacing interior components, conducting a final inspection of work, and completing workplace processes and documentation.

It applies to those working in the automotive and marine trimming industry.

No licensing, legislative, regulatory or certification requirements apply to this unit at the time of publication.

Competency Field

Vehicle Body

Unit Sector

Technical – Trimming and Upholstery

Elements and Performance Criteria

Elements	Performance Criteria
Elements describe the essential outcomes.	Performance criteria describe the performance needed to demonstrate achievement of the element. Where bold and italicised text is used, further information is detailed in the range of conditions section.
1. Prepare to remove and replace interior trim component	1.1 Job requirements are determined from workplace instructions 1.2 Original equipment manufacturer (OEM) specifications and workplace procedures are accessed and interpreted 1.3 Interior trim component to be removed and replaced is identified and inspected for damage

Elements	Performance Criteria
Elements describe the essential outcomes.	Performance criteria describe the performance needed to demonstrate achievement of the element. Where bold and italicised text is used, further information is detailed in the range of conditions section.
	1.4 Hazards associated with the work are identified and risks are managed 1.5 Tools and equipment, including personal protective equipment (PPE), are selected and checked for serviceability 1.6 Work is planned to minimise waste and use time efficiently
2. Remove, store and replace trim	2.1 Trim component is removed according to OEM specifications, workplace procedures, and <i>safety and environmental requirements</i> , and without causing damage to vehicle or other components 2.2 Trim component is safely stored in preparation for replacement 2.3 Trim component is replaced according to OEM specifications, workplace procedures, and safety and environmental requirements, and without causing damage to vehicle or other components
3. Complete work processes	3.1 Final inspection is made to ensure work meets workplace expectations and component is presented ready for use 3.2 Work area is cleaned, waste and non-recyclable materials are disposed of, and recyclable material is collected and stored 3.3 Tools and equipment are checked, reported if faulty, and stored according to workplace procedures 3.4 Workplace documentation is processed according to workplace procedures

Foundation Skills

This section describes those language, literacy, numeracy and employment skills that are essential to performance and are not explicit in the performance criteria.

Skills	Description
Learning skills to:	locate appropriate sources of information efficiently.
Writing skills to:	legibly and accurately fill out workplace documentation.
Oral communication skills to:	- clarify instructions and procedures - clearly report quality issues and job outcomes.
Numeracy skills to:	identify tool size using metric and imperial systems of measurements.

Skills	Description
Planning and organising skills to:	plan own work requirements and prioritise actions to achieve required outcomes and ensure tasks are completed within workplace timeframes.
Technology skills to:	use specialist removal and installation equipment.

Range of Conditions

This section specifies work environments and conditions that may affect performance. Essential operating conditions that may be present (depending on the work situation, needs of the candidate, accessibility of the item, and local industry and regional contexts) are included. Bold italicised wording, if used in the performance criteria, is detailed below.

<i>Safety and environmental requirements</i> must include:	- work health and safety (WHS) and occupational health and safety (OHS) requirements, including procedures for: - selecting and using PPE - using specialist tools and equipment - manual handling components - environmental requirements, including procedures for storing and disposing of waste materials.
---	---

Unit Mapping Information

Equivalent to AURVTT2003 Remove and replace vehicle interior trim components

Links

Companion Volume implementation guides are found in VETNet -

<https://vetnet.gov.au/Pages/TrainingDocs.aspx?q=b4278d82-d487-4070-a8c4-78045ec695b1>

Assessment Requirements for AURVTT003 Remove and replace automotive and marine interior trim components

Modification History

Release	Comment
Release 1	New unit of competency.

Performance Evidence

Before competency can be determined, individuals must demonstrate they can perform the following according to the standard defined in this unit's elements, performance criteria, range of conditions and foundation skills:

- remove, store and replace trim components for three different vehicles or vessels, in which the work must involve:
 - door trims
 - carpets
 - head lining.

Knowledge Evidence

Individuals must be able to demonstrate knowledge of:

- work health and safety (WHS) and occupational health and safety (OHS) requirements relating to removing and replacing automotive and marine interior trim components, including procedures for:
 - selecting and using personal protective equipment (PPE)
 - using specialist tools and equipment
 - manual handling components
- environmental requirements, including procedures for storing and disposing of waste materials
- original equipment manufacturer (OEM) specifications for removing and replacing automotive or marine interior trim components
- types and uses of specialist tools and equipment needed to remove and replace interior trim components
- trim component removal and replacement techniques and procedures, including procedures for protecting vehicle or vessel and components
- procedures for final inspection of automotive or marine interior trim components.

Assessment Conditions

Assessors must satisfy NVR/AQTF assessor requirements.

Competency is to be assessed in the workplace or a simulated environment that accurately reflects performance in a real workplace setting.

Assessment must include direct observation of tasks.

Where assessment of competency includes third-party evidence, individuals must provide evidence that links them to the vehicles or vessels in which they removed and replaced interior trim, e.g. work orders.

Assessors must verify performance evidence through questioning on skills and knowledge to ensure correct interpretation and application.

The following resources must be made available:

- automotive or marine trimming workplace or simulated workplace
- workplace instructions
- PPE required to remove and replace vehicle or vessel interior trim components
- OEM specifications and manuals
- three different vehicles or vessels requiring the removal and replacement of interior trim components specified in the performance evidence
- tools, equipment and materials appropriate for removing and replacing automotive and marine interior trim.

Links

Companion Volume implementation guides are found in VETNet -

<https://vetnet.gov.au/Pages/TrainingDocs.aspx?q=b4278d82-d487-4070-a8c4-78045ec695b1>

Companion Volume implementation guides are found in VETNet -

<https://vetnet.gov.au/Pages/TrainingDocs.aspx?q=b4278d82-d487-4070-a8c4-78045ec695b1>